





<sup>\*</sup>Note 1: MH02 is a common used remote control for a various of sensor, MC612V D RC only works under Mode A.
\*Note 2: 1/2/3/4: These 4 optional quick setting are factory default settings, see table chart 1

1. Factory default settings: According to the default settings, short press 1/2/3/4, then press 💮 to transmit.

Short press 1/2/3/4 number key, select your own sensor settings such as "Detection Range / Hold Time / Daylight Sensor / Stand-by Period / Stand-by Dimming Level", then press 💮 to transmit.

## 3. Save the modification:

After you have set the customized parameters, long press the numeric keys 1/2/3/4 number key for more than 3s and will save the current settings to the 1/2/3/4 number key.

Quick Setting	Detection Area	Hold Time	Daylight sensor	Stand-by period	Stand-by dim level
1	100%	85	Disable	os	10%
2	100%	85	5Lux	1min	10%
3	100%	1min	15Lux	1min	10%
4	100%	5min	50Lux	30min	10%

(Table chart 1: 1/2/3/4 Quick Setting for MC612V D RC)