

Junction Box

For PLS and PLP series Panel Lights

Provides an Extra 25.5 in³
of Volume for Wiring

8 Additional Knockout
Locations for Line or
Low Voltage



Easily Attaches to
Existing Panel Driver Box

Junction Box is Required
for the Installation of the
Emergency Driver (BLD-YT08D)
on PLP and PLS Panels

NOTE: The PLS-JB has been tested and approved by cETL for use with CSC LED PLS and PLP series backlit flat panels and can ONLY be used with these products to meet the listing requirements.

DIMENSIONAL DRAWING (IN)

