

### WARNINGS



#### WARNINGS

FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS MAY RESULT IN DEATH, SERIOUS INJURY OR SIGNIFICANT PROPERTY DAMAGE. For your protection, read and follow these warnings and instructions carefully before installing or maintaining this equipment.

**RISK OF ELECTRIC SHOCK – NEVER CONNECT TO, DISCONNECT FROM, OR SERVICE WHILE EQUIPMENT IS ENERGIZED.**

**RISK OF FIRE.** Lamps are hot. Keep combustible material away from hot parts. Observe lamp manufacturer's warnings, recommendations and restrictions on lamp operation and maintenance. Make sure lamps are correctly installed.

**DO NOT USE ABRASIVE MATERIALS, OR OTHER SOLVENTS. USE OF THESE SUBSTANCES MAY DAMAGE FIXTURE, WHICH MAY RESULT IN PERSONAL INJURY.**

**RISK OF PERSONAL INJURY.** This product may have sharp edges. Wear gloves to prevent cuts or abrasions when removing from carton, handling, installing and maintaining this product.

**IMPORTANT SAFEGUARDS:** When using electrical equipment, basic safety precautions should always be followed, including the following

- Before wiring to power supply, turn off electricity at fuse or circuit breaker.
- Disconnect AC power and unplug battery before servicing.
- Consult your local building code for approved wiring and installation.
- Do not use outdoors.

**ATTENTION RECEIVING DEPARTMENT:** Note actual fixture description of any shortage or noticeable damage on delivery receipt. File claim for common carrier (LTL) directly with carrier. Claims for concealed damage must be filed within 15 days of delivery. All damaged material, complete with original packaging must be retained.

- Do not let power supply cord touch hot surfaces.
- Do not install in hazardous locations or near gas or electric heater.
- The use of accessory equipment not recommended by manufacturer may cause and will void the unit's warranty.
- Do not install a damaged fixture.
- This product must be installed in accordance with the applicable installation codes and ordinances.
- Proper grounding is required to ensure personal safety (where applicable).
- All service shall be performed by qualified personnel. This product must be installed and maintained in accordance with the applicable installation codes by a person familiar with the construction and operation of the product and the hazards involved.
- Equipment should be mounted in locations and at heights where it will not be subjected to tampering by unauthorized personnel.
- Do not use this equipment for anything other than its intended use.
- Use caution when servicing batteries. Battery acid can cause burns to skin and eyes. If acid is spilled on skin or eyes, flush acid with fresh water and contact a physician immediately.
- Allow battery to charge for 24 hours before first use.
- Save these instructions for future reference.

#### STORAGE


**WHILE IN STORAGE, BATTERIES MUST BE CHARGED FOR 24 HOURS EVERY 6 MONTHS.**

If it is necessary to store the unit, be sure to place it in a clean dry area. For extended storage, the batteries must be charged for 24 hours every 6 months. Failure to do so will result in reduced battery capacity or failure, which WILL NOT be covered under the warranty. Charging is accomplished by installing the batteries, turning the unit on and allowing it to run.

### WIRING DIAGRAM

#### BATTERY DISCHARGE TABLE

Model	Output Voltage	Total Connected Wattage			
		30 min	60 min	90 min	120 min
EML-RMC-S-UD-36W	6V	36W	17W	11W	8W

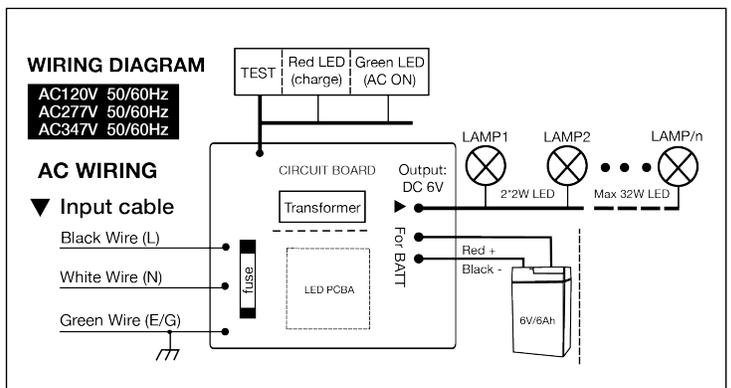

### INSTALLATION INSTRUCTIONS

1. Extend unswitched 24 hour AC supply of rated voltage to a junction box (supplied by others) installed in accordance with all applicable codes and standards. Leave a minimum of 8" of slack on the wire. This circuit should NOT be energized/live at this time.
2. Access fixture wiring compartment by unscrewing the side cover and unscrewing the screw on the top cover that the LED heads are mounted to (Fig.1).
3. Determine which pictograms will be used (Fig. 1).

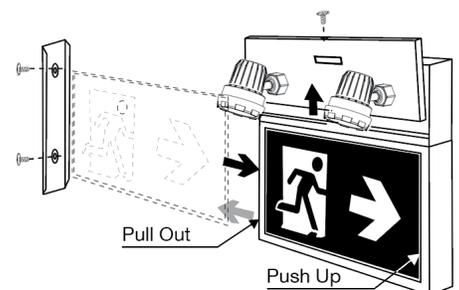


Fig. 1

## FLAG MOUNT

- a) Pull wires through junction box mounting plate then connect junction box mounting plate to the junction box with screws.
- b) Pull wires through the canopy then connect the canopy to the junction box mounting plate with screws.
- c) Remove the side cover and attach it to the canopy.

## WALL MOUNT

- a) Pull wires through junction box mounting plate then connect junction box mounting plate to the junction box with screws (Fig. 2).
- b) Pull wires through the back mounting plate then connect the back mounting plate to the junction box mounting plate with screws (Fig. 2).

## CEILING MOUNT

- a) Pull wires through junction box mounting plate then connect junction box mounting plate to the junction box with screws (Fig. 3).
- b) Pull wires through the canopy then connect the canopy to the junction box mounting plate with screws (Fig. 3).
- c) Attach the top of the fixture to the canopy with the provided screws (Fig. 3).

4. Make wiring connections according to the wiring diagram on page 1. Choose the applicable wiring diagram. Ensure that the internal battery is connected to the circuit board.

**CAUTION!:** Failure to insulate unused wire may result in a shock hazard or unsafe condition as well as equipment failure.

4. Secure all internal wires.
5. Re-insert pictograms by sliding them in, and re-attach side cover.
6. Do not rely on the electrical connections as the only support for the unit.

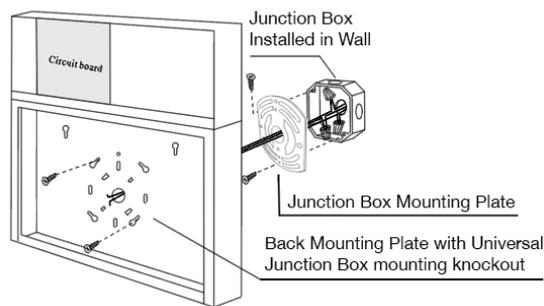


Fig. 2

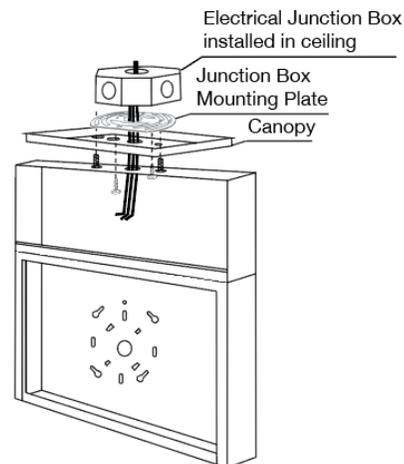


Fig. 3

## OPERATION

1. To test, press the TEST switch. The AC indicator will go out and the LEDs will switch to battery power.
2. Release the TEST switch. The LEDs will switch back to AC power and the AC indicator will come on.

## MAINTENANCE

1. Code requires that the equipment be tested every 30 days for 30 seconds, and that written records be maintained for all test results and repairs (see Maintenance Table at the end of page 3). Further, the equipment is to be tested once a year for the required duration as per code. The battery is to be replaced or the equipment repaired whenever the equipment fails to operate as intended during the duration of the test. The manufacturer strongly recommends compliance with all code requirements.

2. Clean lenses on a regular basis to provide maximum light distribution in case of an emergency.

**Note:** The servicing of any parts should be performed by qualified service personnel only. The use of replacement parts not furnished by the manufacturer may cause equipment failure and will void the warranty.

TYPE:						Location:							Full Test
Sr. No.:						Endroit:							Essai complet
Date:	J	F	M	A	M	J	J	A	S	O	N	D	
20____													
20____													
20____													
20____													
20____													
20____													
20____													
20____													
20____													
20____													