

INSTRUCTIONS FOR THE FOLLOWING FIXTURES

Order	Model
R32014	RENO-WSP-MCCT-MW-MS-G2

CAUTION

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS



Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.

Coupez le courant au niveau de la boîte à fusibles en enlevant un fusible ou en déclenchant le déjoncteur avant d'effectuer l'installation, pour prévenir le risque de chocs électriques.

GENERAL

All electrical connections must be in accordance with local and national electrical code (N.E.C) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.


Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instruction.

ASSEMBLY & INSTALLATION

1. Loosening the two Fixture plate screw (17) and take the Metal Ring (13) out and then take the PC Diffuser (12) out from the Fixture Pan (9).
2. Secure the Cross Bar (15) to the Outlet Box (1) by two Mounting Screws I (11).
3. Pull the Supply Wires (2&6) and the House Ground Wire (4) out from the Outlet Box (1).
4. Make the wiring connections(7): Connect the White Supply Wire (4) to the White Fixture Wire(5); Connect the Black Supply Wire (6) to the Black Fixture Wire (8), secure the Green House Ground Wire (2) and Green Fixture Ground Wire (3) with wire Connectors (7).
5. Carefully tuck all wires back into the Outlet Box (1). Put the Fixture Pan (9) over Cross bar (15) and then secure the Fixture Pan (9) by the Mounting screw II (14).
6. Put the PC Diffuser (12), Metal Ring (13), Bottom cover(16) together, then secure it by tightening the Fixture Screw(17).



INSTALLATION

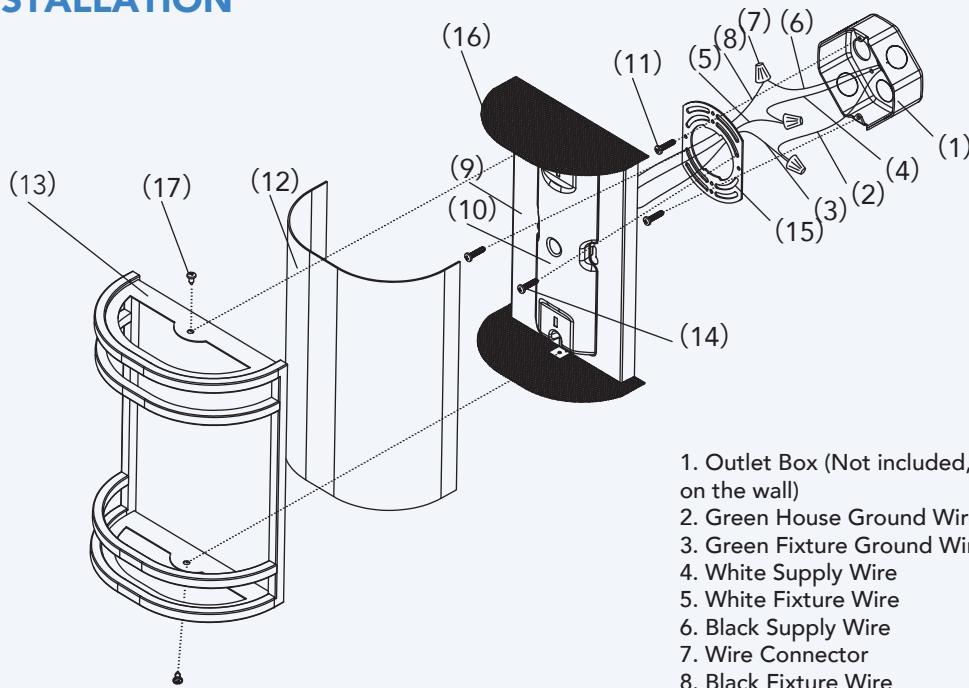

1. Outlet Box (Not included, preinstalled on the wall)
2. Green House Ground Wire
3. Green Fixture Ground Wire
4. White Supply Wire
5. White Fixture Wire
6. Black Supply Wire
7. Wire Connector
8. Black Fixture Wire
9. Fixture Pan

10. LED Module
11. Mounting Screw I
12. PC Diffuser
13. Metal Ring
14. Mounting Screw II
15. Crossbar
16. Bottom cover
17. Fixture plate screw

Microwave Sensor Default setting



1. Under normal power conditions, the fixture remains at a standby brightness of 30%.
2. When motion is detected, the fixture increases to 100% brightness.
3. Five minutes after no further motion is detected, the fixture automatically dims back to 30%.