

CUT OFF WALL PACK INSTALLATION GUIDE

INSTRUCTIONS FOR THE FOLLOWING FIXTURES

Order	Model	
R51041 R51042 R51043 R51044	RENO-FCWP-MW-DV-MCCT-R1-BRN RENO-FCWP-MW-DV-MCCT-R2-BRN RENO-FCWP-MW-DV-MCCT-R1-BK RENO-FCWP-MW-DV-MCCT-R2-BK	 RENO-FCWP-MW-DV-MCCT-R1-WH RENO-FCWP-MW-DV-MCCT-R2-WH



PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is forbiden as it may cause personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -40°C to 45°C.
- MIN 75°C SUPPLY CONDUCTORS.
- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.

INSTALLATION

1. Fix the J-Box on the wall. (Fig 1)




Fig 1

2. Fix the Mounting Plate on the J-Box. (Fig 2)




Fig 2

3. Hook the hanging rope of the lamp on the Mounting Plate. (Fig 3)






Fig 3

4. Connect the corresponding terminals according to the wiring diagram, connect L, N, and ground wires properly. (Fig 4)





5. Hide the connected wires into the J-Box and hook the lamp body onto the Mounting Plate. (Fig 5)

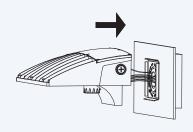


Fig 5

6. Fix the lamp body and the Mounting Plate with screws. (Fig 6)



Fig 6



CUT OFF WALL PACK INSTALLATION GUIDE

WATTAGE & CCT SELECTABLE GUIDANCE

Factory Default Setting:

Watt: 60W/100W CCT: 5000K Photocell: ON

